




# 1200 / 1300 SERIES SINGLE DOOR PREP


PREPPING THE DOOR PRIOR TO PANIC INSTALLATION MAY REQUIRE SHIMMING THE STRIKE FOR PROPER ALIGNMENT.

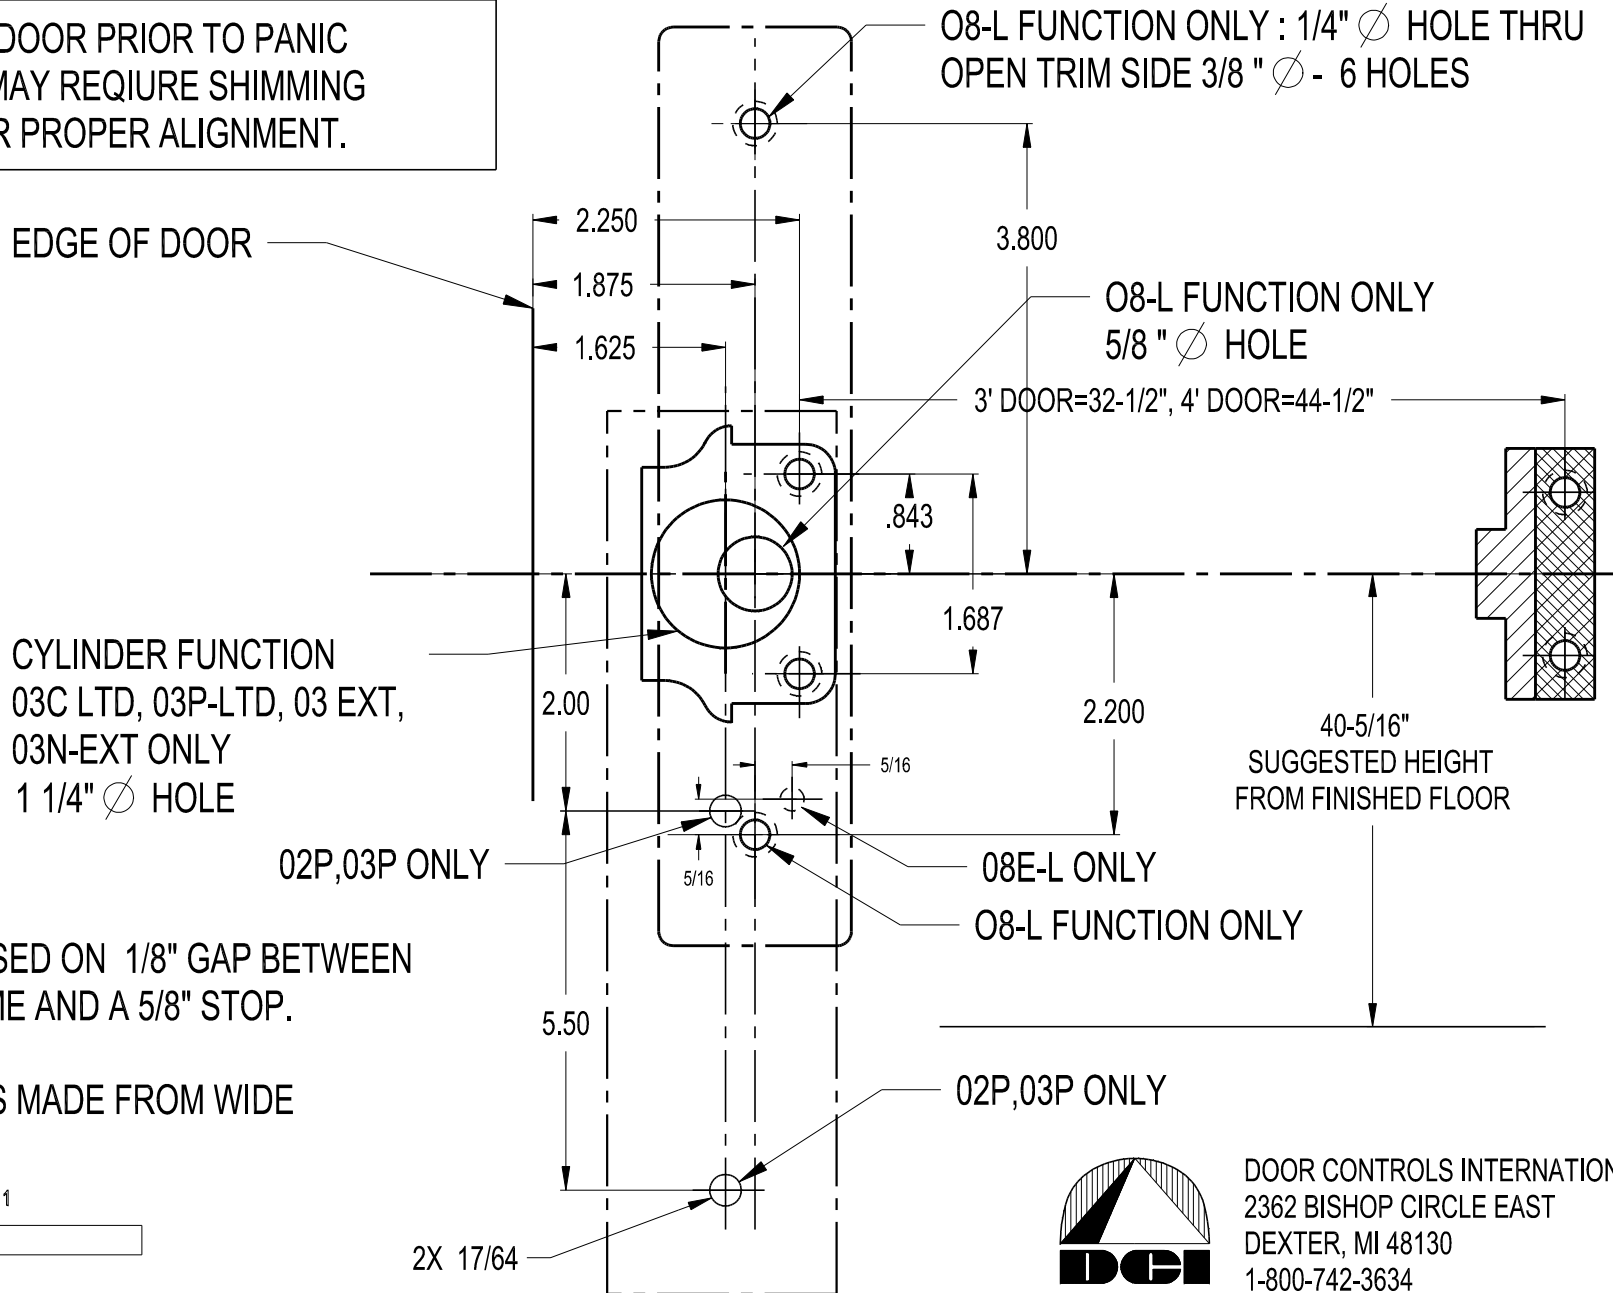

CYLINDER FUNCTION  
03C LTD, 03P-LTD, 03 EXT,  
03N-EXT ONLY  
1 1/4" Ø HOLE

DIMENSIONS BASED ON 1/8" GAP BETWEEN DOOR AND FRAME AND A 5/8" STOP.

MEASUREMENTS MADE FROM WIDE EDGE OF DOOR



DOOR CONTROLS INTERNATIONAL  
2362 BISHOP CIRCLE EAST  
DEXTER, MI 48130  
1-800-742-3634